

User Manual

N1C

N1C.LR3000G/ N1C.LR6000 Online UPS

Table Of Contents

ABOUT THIS MANUAL	1
Purpose.....	1
Scope	1
SAFETY INSTRUCTIONS.....	1
Standard.....	2
INTRODUCTION	3
Features	3
Product Overview.....	4
INSTALLATION	5
Unpacking and Inspection.....	5
Preparation	5
UPS Rack Mounting.....	5
Battery Connection	6
AC Input/Output Connection	7
Communication Connection.....	8
Software Installation.....	9
EPO Function.....	9
OPERATION.....	10
Operation and Display Panel	10
LCD Display Icons	11
LCD Setting.....	13
Display Setting	16
Operating Mode Description	18
Fault Reference Code	19
Warning Indicator	20
SPECIFICATIONS	21
Table 1 Line Mode Specifications	21
Table 2 Battery Mode Specifications	22
Table 3 Charge Mode Specifications	22
Table 4 ECO/Bypass Mode Specifications.....	23
TROUBLE SHOOTING	24
PARALLEL FUNCTION	25
Appendix I: Approximate Back-up Time Table	33

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference. **To receive full warranty benefits and information register your product at <https://lithium-ion-ups.com/warrantyregistration/>**

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only lithium iron phosphate type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Any attempt to disassemble, repair, or service will void all warranties and may result in a risk of electrical shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this UPS, please follow required spec to select appropriate cable size. It's very important to correctly operate this UPS.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuses are provided as over-current protection for the battery supply.
11. GROUNDING INSTRUCTIONS -This UPS should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this UPS.
12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this UPS back to local dealer or service center for maintenance.

Standard

* Safety	
IEC/EN 62040-2	
* EMI	
Conducted Emission..... :IEC/EN 62040-2	Category C2
Radiated Emission..... :IEC/EN 62040-2	Category C2
* EMS	
ESD..... :IEC/EN 61000-4-2	Meets the requirements of Performance Criterion B
RS..... :IEC/EN 61000-4-3	Meets the requirements of Performance Criterion A
EFT..... :IEC/EN 61000-4-4	Meets the requirements of Performance Criterion A
SURGE..... :IEC/EN 61000-4-5	Meets the requirements of Performance Criterion B
CS..... :IEC/EN 61000-4-6	Meets the requirements of Performance Criterion A
Power-frequency Magnetic field..... :IEC/EN 61000-4-8	Meets the requirements of Performance Criterion A
Low Frequency Signals..... :IEC/EN 61000-2-2	Meets the requirements of Performance Criterion A


INTRODUCTION

This is a multi-function UPS, combining functions of inverter and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current and acceptable input voltage based on different applications.


Features

- Pure sine wave output
- Configurable battery charging current based on applications via LCD setting
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function
- Zero-transfer Time

Product Overview

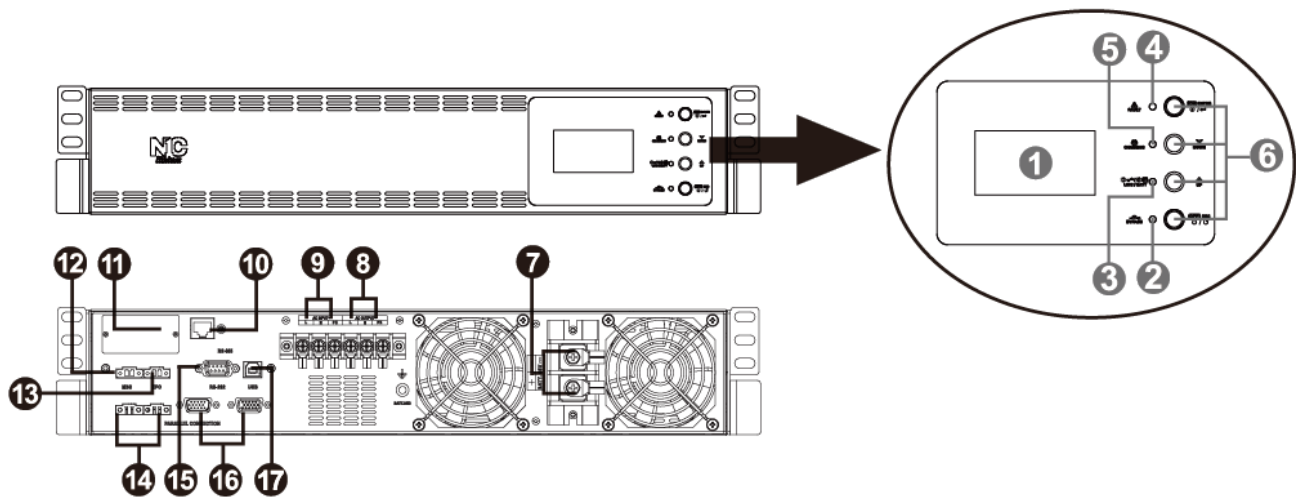

N1C.LR3000G

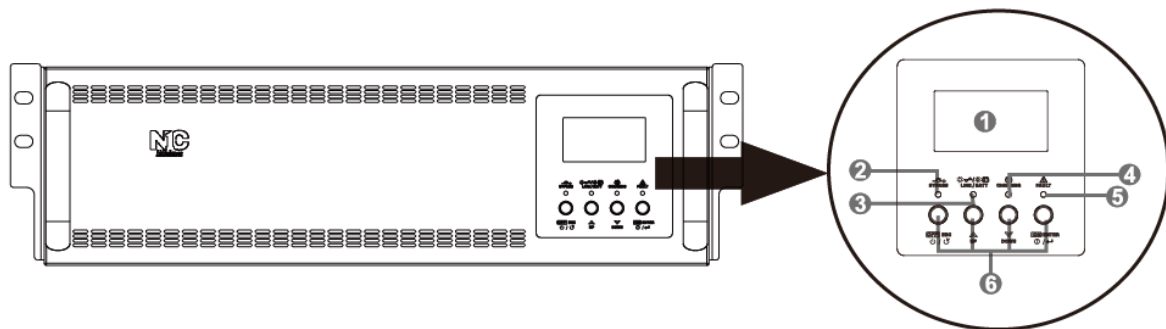

N1C.LR6000

1. LCD display
2. Bypass indicator
3. Status indicator
4. Charging indicator
5. Fault indicator
6. Function keys (Please refer to operation chapter for the detailed operation)
7. Battery input
8. AC output terminals
9. AC input terminals
10. BMS communication port
11. Intelligent slot (Reserve)
12. MBS port (Maintenance bypass)
13. EPO port (Emergency power off)
14. Current sharing port (only for parallel model)
15. RS-232 communication port
16. Parallel communication port (only for parallel model)
17. USB communication port

NOTE: For parallel model installation and operation, please check Parallel Function chapter for the details.

INSTALLATION

Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit with installed SNMP card x 1
- User manual x 1
- Communication cable x 2
- Software CD x 1
- Rack rail kits x 1 set
- Parallel kits
- Battery connection cables with ring terminals x 2


Preparation

Before connecting all wirings, please take off bottom terminal cover.

UPS Rack Mounting

Consider the following points before selecting where to install the UPS:

- Do not put the UPS on flammable construction materials.
- Dusty conditions on the unit may impair the performance of this UPS.
- The ambient temperature should be between 0°C and 40°C to ensure optimal operation.
- For proper operation, please use appropriate cables.

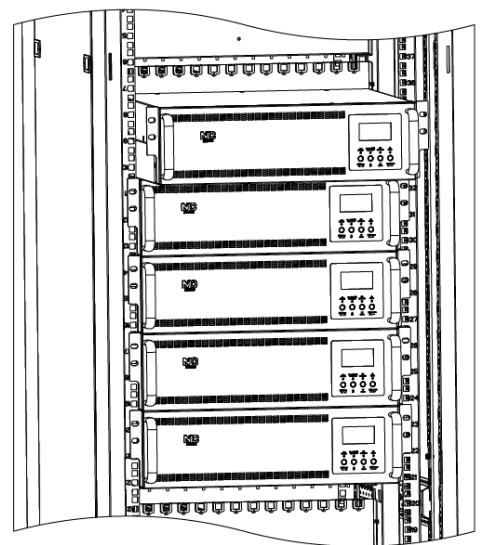

Battery Connection


CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and UPS. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! N1C.LR3000G and N1C.LR6000 may only be used with N1C.L4850EBM2U or N1C.L48100EBM3U lithium battery modules. Please see the User Manual included with the battery modules for more information.

WARNING! All wiring must be performed by a qualified personnel.


WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Ring terminal:

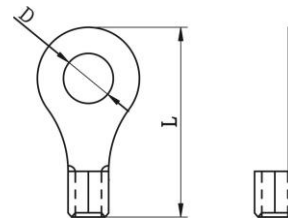


Recommended battery cable and terminal size:

Model	Maximum Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable mm ²	Dimensions		
					D (mm)	L (mm)	
N1C.LR3000G	80A	200AH	1*4AWG	22	6.4	33.5	3~ 4 Nm
			2*6AWG	28	6.4	29.8	
N1C.LR6000	137A	200AH	1*2AWG	34	8.4	42.7	4~ 5 Nm
			2*4AWG	44	8.4	33.5	

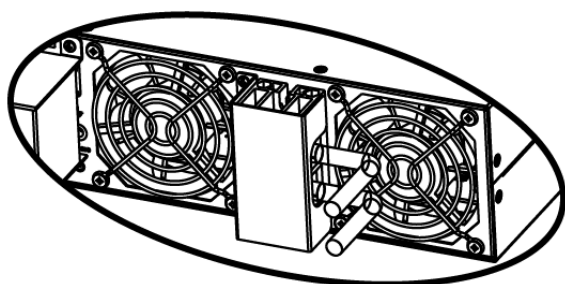

N1C.LR3000G

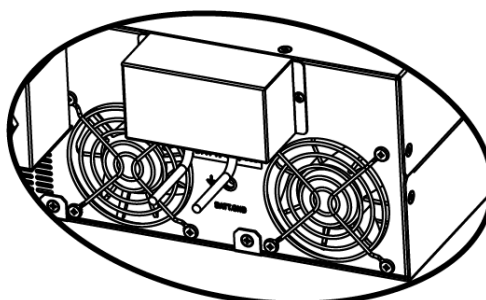

N1C.LR6000



WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a **separate** AC breaker between UPS and AC input power source. This will ensure the UPS can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 30A for 3KVA and 50A for 6KVA.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.


WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input/output connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Recommended cable requirement and terminal size or AC wires:

Model	Gauge	Ring Terminal			Torque Value
		Cable mm ²	Dimensions		
			D (mm)	L (mm)	
N1C.LR3000G	12AWG	3.3	4.3	19	2Nm
N1C.LR6000	10AWG	5.5	5.3	19	3Nm

Ring terminal:

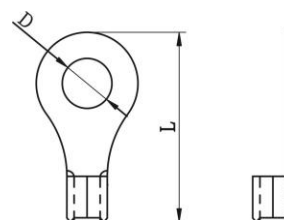


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L1 and L2 3 mm. Then, insert one conductor into one ring terminal as an assembled wire.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⊕) first.


⊕ → **Ground (yellow-green)**

L1 → (brown or black)

L2 → (White)

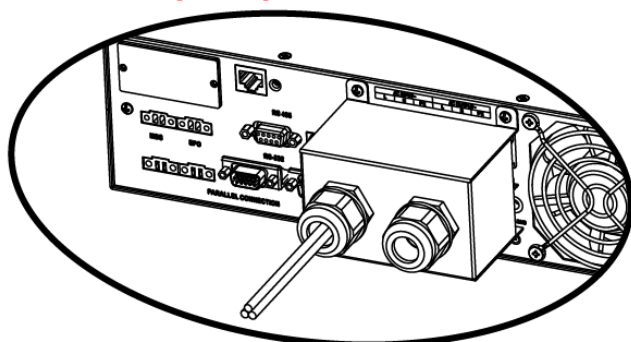

N1C.LR3000G

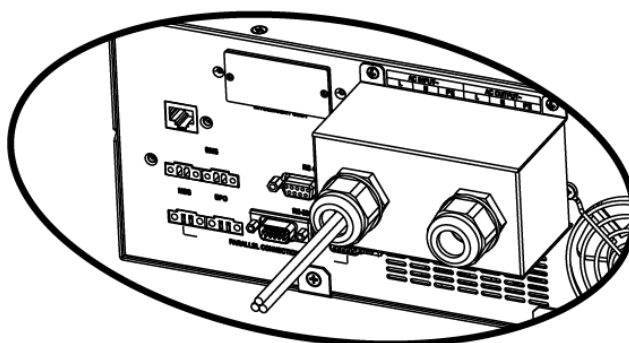

N1C.LR6000



WARNING:


Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor (⊕) first.


⊕ → **Ground (yellow-green)**

L1 → (brown or black)

L2 → (White)

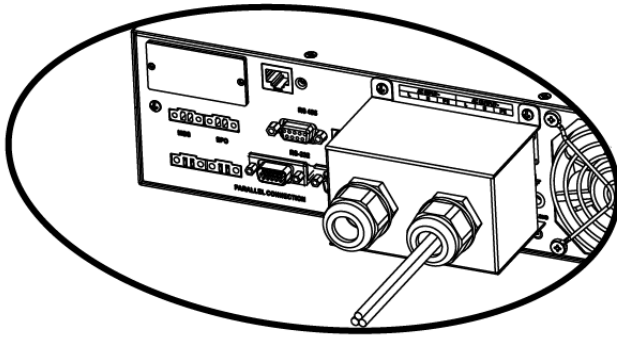

N1C.LR3000G

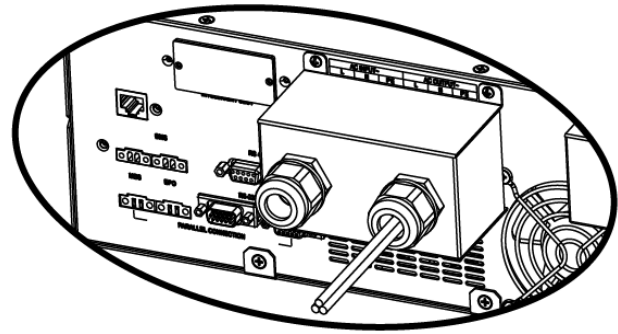

N1C.LR6000







5. Make sure the wires are securely connected.

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these UPSs are worked in parallel operation.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this UPS will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

Communication port:

RS232 port	USB port	Intelligent slot
		
RS485 port	BMS port	The RJ45 line sequence is as follows:
PIN4: RS485-A, PIN5: RS485-B, PIN8:GND	PIN4: RS485-A, PIN5: RS485-B, PIN8:GND	
		

To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB/RS232/RS485 port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

When installing extra communication card in the UPS, it will provide advanced communication and monitoring options.

Software Installation


For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown. Use supplied RS-232 or USB communication cable to connect RS-232/USB port of UPS and RS-232/USB port of PC. Then, follow below steps to install monitoring software.

1. Insert the included installation CD into CD-ROM drive and then follow the on-screen instructions to proceed software installation. If there no screen shows 1 minute after inserting the CD, please execute setup.exe file for initiating software installation.
2. Follow the on-screen instructions to install the software.

When your computer restarts, the monitoring software will appear as an orange plug icon located in the system tray, near the clock.

EPO Function


This UPS is equipped with EPO function. By default, the UPS is delivered from factory with Pin 1 and pin 2 closed (a metal plate is connected to Pin 1 and Pin2) for UPS normal operation. To activate EPO function, remove two screws on EPO port and metal plate will be removed.

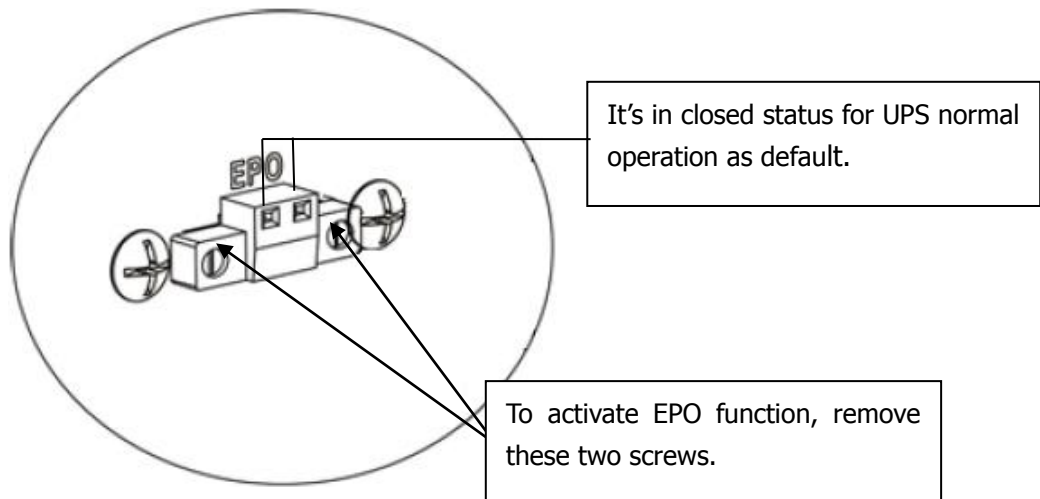


OPERATION

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the UPS. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

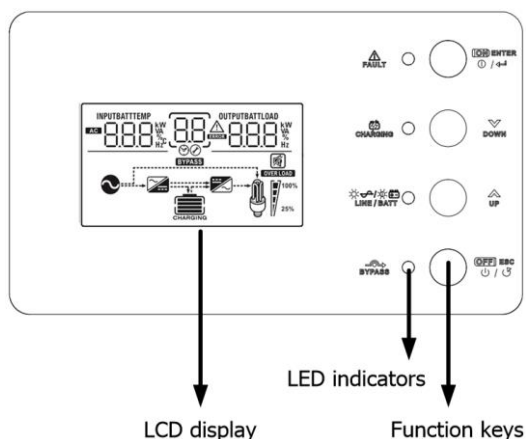

For 3K model

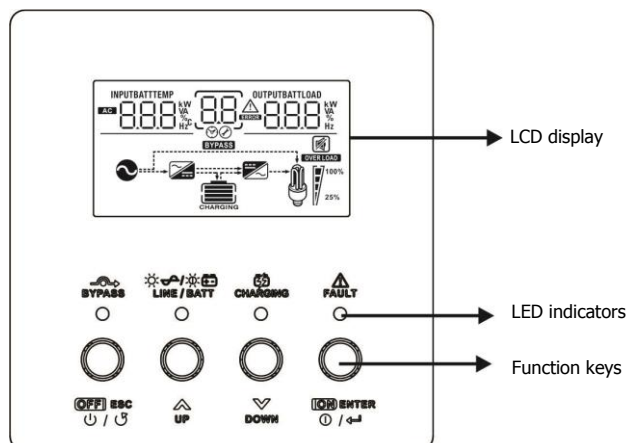

For 6K model

























Function Keys




Key	Function	Operation
	Turn on the UPS	Press and hold the key for more than 1s.
	To confirm the selection	Press this key in setting mode
	Turn off the UPS	Press and hold the key for more than 1s.
	To exit setting mode	Press this key in setting mode
	Return to default display	Press this key in display mode
	To go to previous selection	Press this key
	To go to next selection	Press this key
	To enter setting mode	Press and hold these two keys simultaneous for more than 1s in display mode

LED Indicators


LED Indicator			Messages
	yellow	Solid On	Output is powered by utility in Bypass/ECO/Fault mode.
	Green	Solid On	Output is powered by utility in Line/ECO mode.
	Green	Flashing	Output is powered by battery in battery mode.
	yellow	Solid On	Battery is fully charged.
	yellow	Flashing	Battery is charging.
	Red	Solid On	Fault occurs in the UPS.
	Red	Flashing	Warning condition occurs in the UPS.








There are 4 LEDs on front panel to show the UPS working status:

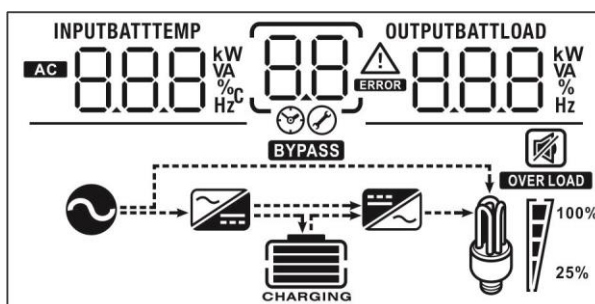




















LED Mode	 BYPASS	 LINE BATT	 CHARGING	 FAULT
UPS On				
Bypass mode			--	
Line mode			--	
Battery mode				
ECO mode			--	
Fault mode	--		--	
Warning mode	--	--	--	

Note:  means LED is lit,  means LED is flashing,  means LED is faded, -- means LED is lit or faded.

LCD Display Icons



















Icon	Function description
Input Source Information	
	Indicates the AC input.
INPUTBATT 	Indicate input voltage, input frequency, charger current, charger power, battery voltage.
Configuration Program and Fault Information	
	Indicates the setting programs.
	Indicates the warning and fault codes. Warning:  flashing with warning code. Fault:  lighting with fault code
Output Information	
OUTPUTBATTLOAD 	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.













Battery Information				
		Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.		
In AC mode, it will present battery charging status.				
Status	Battery voltage	LCD Display		
Constant Current mode / Constant Voltage mode	<2V/cell	4 bars will flash in turns.		
	2 ~ 2.083V/cell	Bottom bar will be on and the other three bars will flash in turns.		
	2.083 ~ 2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.		
	> 2.167 V/cell	Bottom three bars will be on and the top bar will flash.		
Floating mode. Batteries are fully charged.		4 bars will be on.		
In battery mode, it will present battery capacity.				
Load Percentage	Battery Voltage	LCD Display		
Load >50%	< 1.85V/cell			
	1.85V/cell ~ 1.933V/cell			
	1.933V/cell ~ 2.017V/cell			
	> 2.017V/cell			
Load < 50%	< 1.892V/cell			
	1.892V/cell ~ 1.975V/cell			
	1.975V/cell ~ 2.058V/cell			
	> 2.058V/cell			
Load Information				
		Indicates overload.		
	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%.			
	0%~24%	25%~49%	50%~74%	75%~100%
				
Mode Operation Information				
	Indicates unit connects to the mains.			
	Indicates unit will work in Bypass mode			
	Indicates unit will work in ECO mode			
	Indicates the utility charger circuit is working.			
	Indicates the DC/AC inverter circuit is working.			
Mute Operation				
	Indicates unit alarm is disabled.			















LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

Setting Programs:







Program	Description	Selectable option	
00	Exit setting mode	Escape 	
01	Force exit fault mode: After exit setting mode 10 seconds, the device will exit fault mode and mute the alarm.	Force exit fault mode disable (default) 	Force exit fault mode enable 
02	Maximum charging current: To configure total charging current.	10A (default) 	For 3KW models, setting range is from 10A to 40A. For 6KW models, setting range is from 10A to 60A. Increment of each click is 10A.
03	Output voltage *For N1C.LR3000G, the rated output power is 2.7kVA/2.7KW when the output is set to 208V. *For N1C.LR6000, the rated output power is 5.4kVA/5.4KW when the output is set to 208V.	208V 	220V(default) 
		230V 	240V 
04	Parallel number	1 (default) 	The setting range is from 1 to 6.
05	Battery type	AGM 	Flooded 
		User-Defined (default) 	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 15, 16 and 17.
08	Output frequency	50Hz (default) 	60Hz 
09	Operation Logic	Online mode (default) 	If selected, UPS will work in line mode when utility is available.
		ECO Mode 	If selected, UPS will work in ECO mode when utility is available.







12	Alarm control	Alarm on (default) 	Alarm off 
13	Auto return to default display screen	Return to default display screen (default) 	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 	If selected, the display screen will stay at latest screen user finally switches.
14	AC output mode *This setting is able to set up only when the UPS is in standby mode. Be sure that AC output is off status. Otherwise, please refer to chapter "Power ON/OFF" to press "ESC" button to turn off AC output.	Single(default): 	When the units are used in parallel with single phase, please select "PAL". For 3P1, 3P2, and 3P3 settings please contact the manufacturer for 3-Phase Addendum and guidance."
		Parallel: 	
		L1 phase: 	
		L2 phase: 	
		L3 phase: 	
15	Bulk charging voltage (C.V voltage)	Default setting: 56.4V 	If self-defined is selected in program 5, this program can be set up. Setting range is from 48.0V to 57.0V. Increment of each click is 0.1V.
16	Floating charging voltage	Default setting: 54.0V 	If self-defined is selected in program 5, this program can be set up. Setting range is from 48.0V to 57.0V. Increment of each click is 0.1V.
17	Low DC cut-off voltage	Default setting: 43.5V 	If self-defined is selected in program 5, this program can be set up. Setting range 40.0V to 54.0V. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.



18	Modbus ID	Default setting: 001 	Modbus address setting range from 0-247. Increment of each click is 1.
19	Restore default parameters	Disable restoring default parameters(default) 	Enable to restore default parameters 
20	LCD password control	Disable (default) 	Enable 
21	Set password		Set password: 123
22	Battery equalization	Battery equalization enable 	Battery equalization disable (default) 
		If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.	
23	Battery equalization voltage	Default setting: 57.0V. Setting range is from 48V ~ 57V. Increment of each click is 0.1V. 	
24	Battery equalized time	60 min (default) 	Setting range is from 5 min to 900min. Increment of each click is 5min.
25	Battery equalized timeout	120 min (default) 	Setting range is from 5 min to 900min. Increment of each click is 5min.
26	Equalization interval	30 days (default) 	Setting range is from 0 to 90 days. Increment of each click is one day.
27	Equalization activated immediately	Enable 	Disable (default) 
		If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "EQ ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 25 setting. At this time, "EQ " will not be shown in LCD main page.	

Display Setting

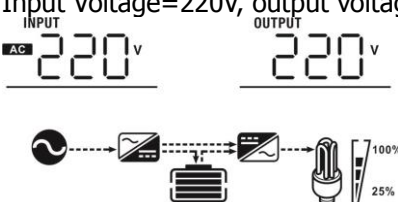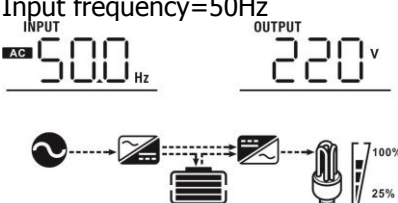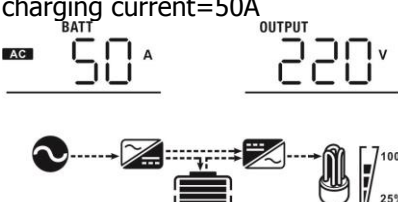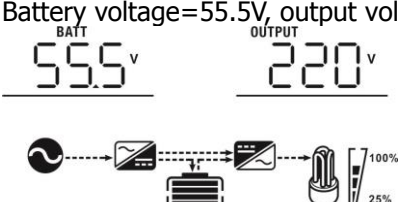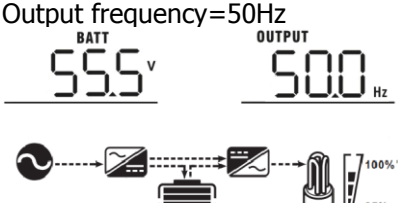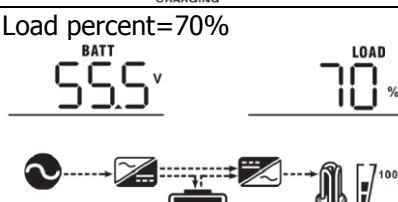





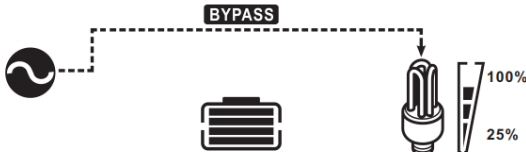
The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, charging power, battery voltage, output voltage, output frequency, load percentage, load in VA, load in Watt, DC discharging current, main CPU Version and second CPU Version.





Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	Input Voltage=220V, output voltage=220V 
Input frequency	Input frequency=50Hz 
Charging current	charging current=50A 
Battery voltage and output voltage	Battery voltage=55.5V, output voltage=220V 
Output frequency	Output frequency=50Hz 
Load percentage	Load percent=70% 

Load in VA	<p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>BATT</p> <p>55.5^v</p> </div> <div style="text-align: center;"> <p>LOAD</p> <p>350^{VA}</p> </div> </div>  <p>When load is larger than 1kVA ($\geq 1\text{kVA}$), load in VA will present x.xkVA like below chart.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>BATT</p> <p>55.5^v</p> </div> <div style="text-align: center;"> <p>LOAD</p> <p>1.50^{k_{VA}}</p> </div> </div> 
Load in Watt	<p>When load is lower than 1kW, load in W will present xxxW like below chart.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>BATT</p> <p>55.5^v</p> </div> <div style="text-align: center;"> <p>LOAD</p> <p>350^W</p> </div> </div>  <p>When load is larger than 1kW ($\geq 1\text{kW}$), load in W will present x.xkW like below chart.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>INPUT</p> <p>AC 220^v</p> </div> <div style="text-align: center;"> <p>LOAD</p> <p>1.20^{kW}</p> </div> </div> 
Battery voltage/DC discharging current	<p>Battery voltage=55.5V, discharging current=1A</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>BATT</p> <p>55.5^v</p> </div> <div style="text-align: center;"> <p>BATT</p> <p>1^A</p> </div> </div> 
Battery level/AC output current	<p>Battery level=42%, AC output current=2A</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>42[%]</p> </div> <div style="text-align: center;"> <p>OUTPUT</p> <p>2^A</p> </div> </div> 



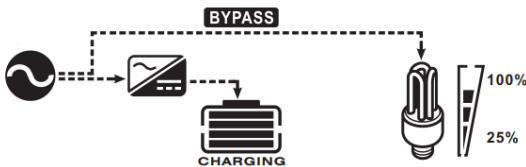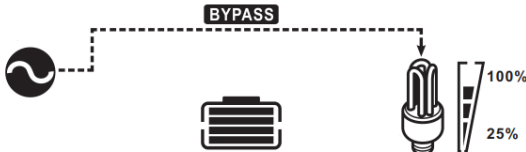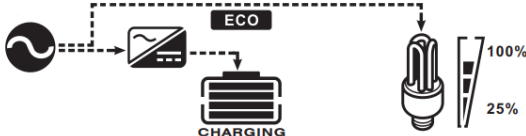













Main CPU version checking.	Main CPU version 00014.04.  
----------------------------	--

Operating Mode Description

Operation mode	Description	LCD display
Standby mode Note: *Standby mode: The UPS is not turned on yet but at this time, the UPS can charge battery without AC output.	No output is supplied by the unit but it still can charge batteries.	Charging by utility. 
		No charging. 
Bypass Mode	The unit will provide output power from the utility. The utility can charge batteries.	Charging by utility 
		No charging 
ECO Mode	The unit will provide output power from the utility. The utility can charge batteries.	Charging by utility 
		No charging 
Fault mode Note: *Fault mode: Errors are caused by inside circuit error or external reasons such as	Utility can bypass.	No charging and Bypass 

over temperature, output short circuited and so on.		No charging 
Line Mode	The unit will provide output power from the mains. It will also charge the battery if connecting to battery.	No charging. 
		Charging by utility. 
Battery Mode	The unit will provide output power from battery.	Power from battery only. 

Fault Reference Code

Fault Code	Fault Event	Icon on
02	Over temperature	
03	Battery voltage is too high	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Overload time out	
08	Bus voltage is too high	
09	Bus soft start failed	
50	PFC over current	
51	OP over current	
52	Bus voltage is too low	
53	UPS soft start failure	
55	Over DC voltage in AC output	
56	Battery is not connected	
57	Current sensor failed	
58	Output voltage is too low	
59	DC-DC over current	

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when UPS is on.	Beep three times every second	
02	Over temperature	None	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
12	EPO activated	Beep twice every 3 seconds	
13	Manual Bypass activated	Beep twice every 3 seconds	
17	Phase Lock failed	Beep twice every 3 seconds	
18	The number of parallel machines is different from the setting	Beep twice every 3 seconds	
19	Bypass loss	Beep twice every 3 seconds	
20	Line loss	Beep twice every 3 seconds	
21	Bypass lock	Beep twice every 3 seconds	
bP	Battery is not connected	Beep twice every 3 seconds	
E9	Battery equalization	None	

SPECIFICATIONS

Table 1 Line Mode Specifications

MODEL	N1C.LR3000G	N1C.LR6000
Input Voltage Waveform	Sinusoidal	
Nominal Input Voltage	230Vac	
Low Loss Voltage	110Vac±7V	
Low Loss Return Voltage	120Vac±7V	
High Loss Voltage	280Vac±7V	
High Loss Return Voltage	270Vac±7V	
Max AC Input Voltage	300Vac	
Nominal Input Frequency	50Hz / 60Hz (Auto detection)	
Low Loss Frequency	46(56)±1Hz	
Low Loss Return Frequency	46.5(57)±1Hz	
High Loss Frequency	54(64)±1Hz	
High Loss Return Frequency	53(63)±1Hz	
Power Factor	>0.98	
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits	
Efficiency (Line Mode)	93% (Peak Efficiency)	
Transfer Time	Line mode←→Battery mode 0ms Line mode / Battery mode ←→Bypass mode 4ms	

Table 2 Battery Mode Specifications

MODEL	N1C.LR3000G	N1C.LR6000
Rated Output Power	3KVA/3KW(220V/230V/240V) 2.7KVA/2.7KW(208V)	6KVA/5.4KW(220V/230V/240V) 5.4KVA/5.4KW(208V)
Output Voltage Waveform	Pure Sine Wave	
Output Voltage Regulation	230Vac±5%	
Output Frequency	50Hz or 60Hz	
Peak Efficiency	90%	
Overload Protection	100ms@≥150% load; 60s@125%~150% load; 10min@105%~125% load;	
Surge Capacity	2* rated power for 5 seconds	
Nominal DC Input Voltage	48Vdc	
Operating Range	40Vdc -60Vdc	
Cold Start Voltage	46Vdc	
Low DC Warning Voltage @ load < 50% @ load ≥ 50%	45.0Vdc 44.0Vdc	
Low DC Warning Return Voltage @ load < 50% @ load ≥ 50%	47.0Vdc 46.0Vdc	
High DC Recovery Voltage	56Vdc	
High DC Cut-off Voltage	60Vdc	
No Load Power Consumption	<67W @48V	

Table 3 Charge Mode Specifications

Utility Charging Mode		
MODEL	N1C.LR3000G	N1C.LR6000
Charging Current @ Nominal Input Voltage	Default: 10A, max: 40A	Default: 10A, max: 60A
Floating Charging Voltage	54Vdc	
Overcharge Protection	60Vdc	
Charging Algorithm	3-Step	
Charging Curve		

Table 4 ECO/Bypass Mode Specifications

Bypass Mode	
MODEL	N1C.LR3000G / N1C.LR6000
Input Voltage Waveform	Sinusoidal
Low Loss Voltage	176Vac±7V
Low Loss Return Voltage	186Vac±7V
High Loss Voltage	280Vac±7V
High Loss Return Voltage	270Vac±7V
Nominal Input Frequency	50Hz / 60Hz (Auto detection)
Low Loss Frequency	46(56)±1Hz
Low Loss Return Frequency	46.5(57)±1Hz
High Loss Frequency	54(64)±1Hz
High Loss Return Frequency	53(63)±1Hz

Table 5 General Specifications

MODEL	N1C.LR3000G	N1C.LR6000
Parallel-able	YES	
Communication	RS232 and USB	
Safety Certification	CE	
Operating Temperature Range	-10°C to 50°C	
Storage temperature	-15°C~ 60°C	
Humidity	5% to 95% Relative Humidity (Non-condensing)	
Dimension (D*W*H)	420 x 438 x 86.2 mm 16.54 x 17.24 x 3.39 in	415 x 438 x 130.8 mm 16.34 x 17.24 x 5.15 in
Net Weight	14.5 kg (31.97 lb)	15 kg (33.07 lb)
Shipping Dimension (D*W*H)	620 x 550 x 200 mm 24.41 x 21.65 x 7.87 in	540 x 540 x 205 mm 21.26 x 21.26 x 8.07 in
Shipping Weight	31.2 kg (68.78 lb)	14.2 kg (31.31 lb)

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The UPS is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 02	Internal temperature of UPS component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 50	PFC over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 51	OP over current or surge.	
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	
	Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.

PARALLEL FUNCTION

1. Introduction

This UPS can be used in parallel with two different operation modes.

1. Parallel operation in single phase with up to 6 units. The maximum supported output power is 32.4KW/36KVA for N1C.LR6000 model and 18KW/18KVA for N1C.LR3000G model.
2. Maximum Six units work together to support three-phase equipment. Four units support one phase maximum. For N1C.LR6000 model, the maximum supported output power is 32.4KW/36KVA and one phase can be up to 21.6KW/24KVA. For N1C.LR3000G model, the maximum supported output power is 18KW/18KVA and one phase can be up to 12KW/12KVA.

WARNING! Please make sure all output N wires of each UPS must be connected always. Otherwise, it will cause UPS fault in error code # 72.

NOTE: If this unit is bundled with share current cable and parallel cable, this UPS is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

2. Package Contents

In parallel kit, you will find the following items in the package:



Parallel communication cable Current sharing cable

3. Wiring Connection

NOTICE: It's requested to connect to battery for parallel operation

The cable size of each UPS is shown as below:

Recommended battery cable and terminal size for each UPS:


Model	Maximum Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable mm ²	Dimensions		
					D (mm)	L (mm)	
N1C.LR3000G	80A	200AH	1*4AWG	22	6.4	33.5	3~ 4 Nm
			2*6AWG	28	6.4	29.8	
N1C.LR6000	137A	200AH	1*2AWG	34	8.4	42.7	4~ 5 Nm
			2*4AWG	44	8.4	33.5	

WARNING: Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between UPS and battery to cause parallel UPS not working.

Recommended AC input and output cable size for each UPS:

Model	Gauge	Ring Terminal			Torque Value
		Cable mm ²	Dimensions		
			D (mm)	L (mm)	
3KVA	12AWG	3.3	4.3	19	2Nm
6KVA	10AWG	5.5	5.3	19	3Nm

Ring terminal:

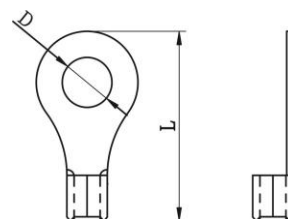

You need to connect the cables of each UPS together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. "X" indicates the number of UPS connected in parallel.

Regarding AC input and output, please also follow the same principle.

CAUTION!! Please install the breaker at the battery and AC input side. This will ensure the UPS can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5-1 and 5-2.

Recommended breaker specification of battery for each UPS:

Model	1 unit*
N1C.LR3000G	100A/80VDC
N1C.LR6000	150A/80VDC

*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit. "X" indicates the number of UPS connected in parallel.

Recommended breaker specification of AC input with single phase:

Model	2 units	3 units	4 units	5 units	6 units
N1C.LR3000G	100A	150A	200A	250A	300A
N1C.LR6000	100A	150A	200A	250A	300A

Note1: Also, you can use 50A breaker for only 1 unit and install one breaker at its AC input in each UPS.

Note2: Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units

Recommended battery capacity


UPS parallel numbers	2	3	4	5	6
Battery Capacity	800AH	1200AH	1600AH	2000AH	2400AH

WARNING! Be sure that all UPS will share the same battery bank. Otherwise, the UPS will transfer to fault mode.


3-1. Parallel Operation in Single phase

Two UPS in parallel:

Power Connection

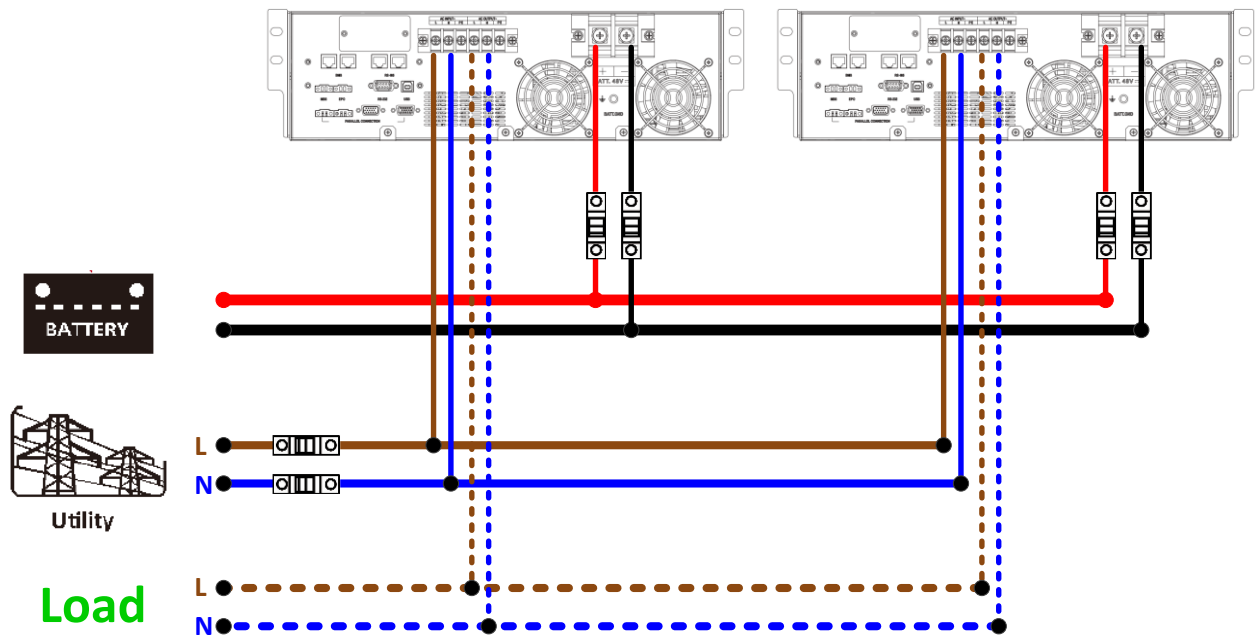


Communication Connection

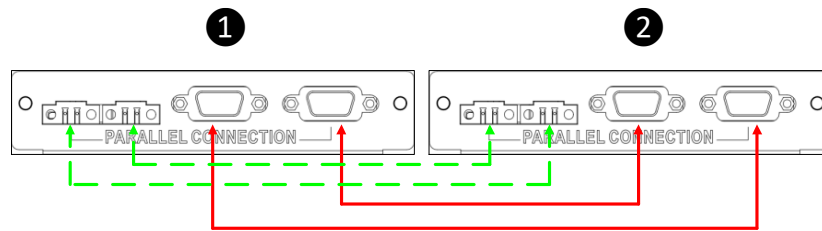


Three UPS in parallel:

Power Connection

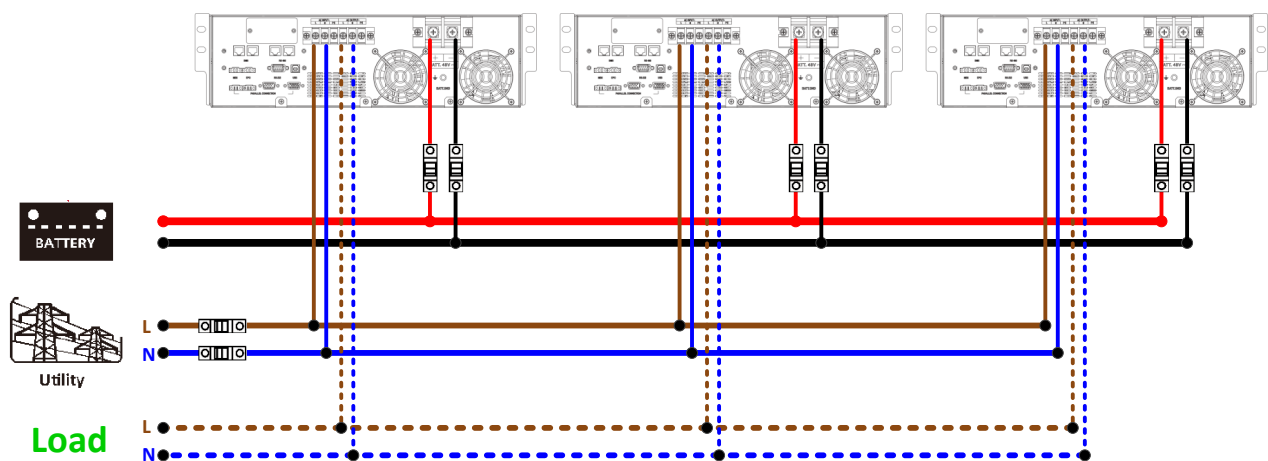


Communication Connection

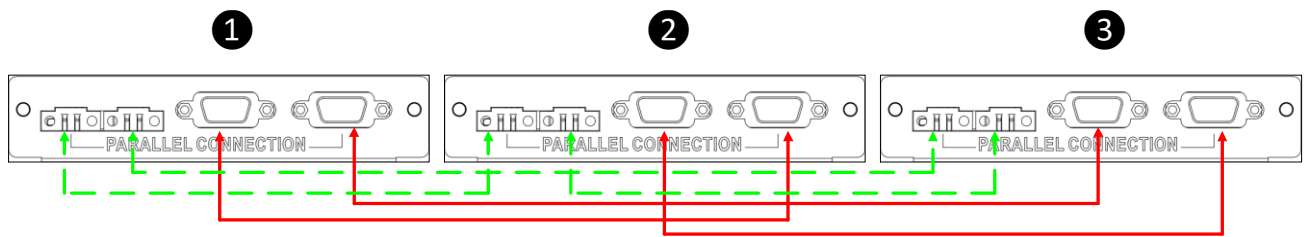


Four UPS in parallel:

Power Connection

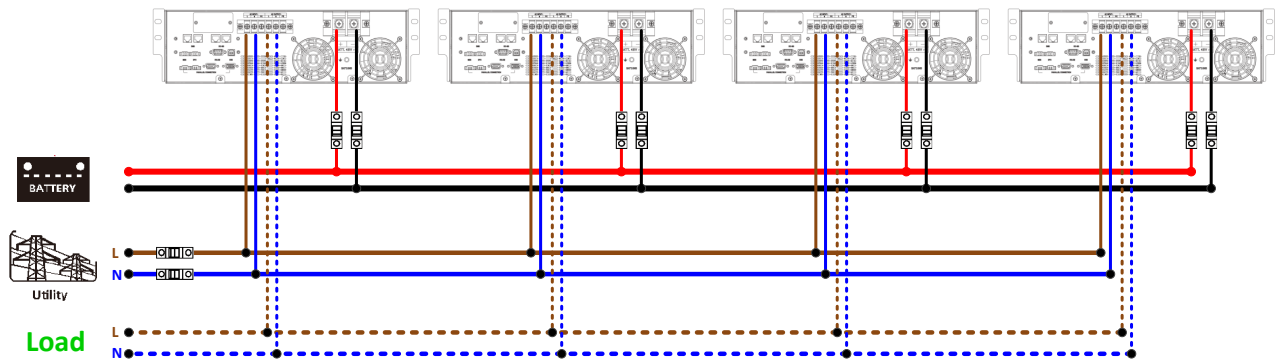


Communication Connection

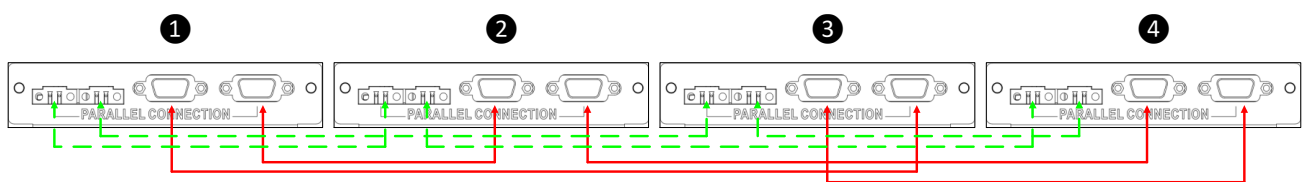


Five UPS in parallel:

Power Connection

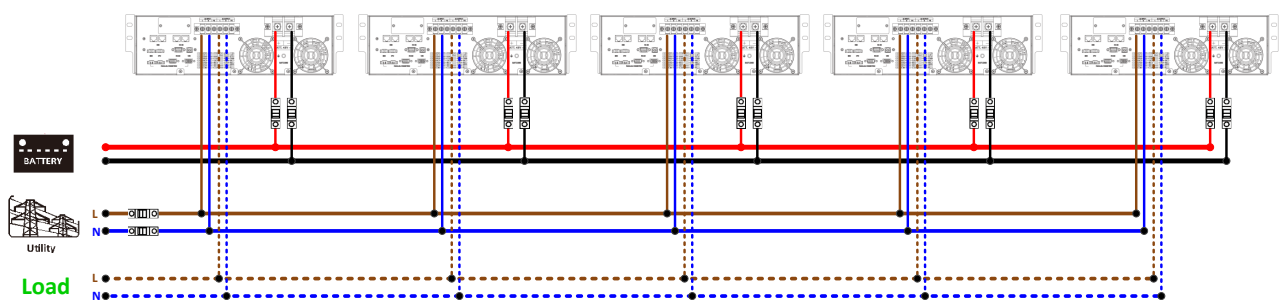


Communication Connection

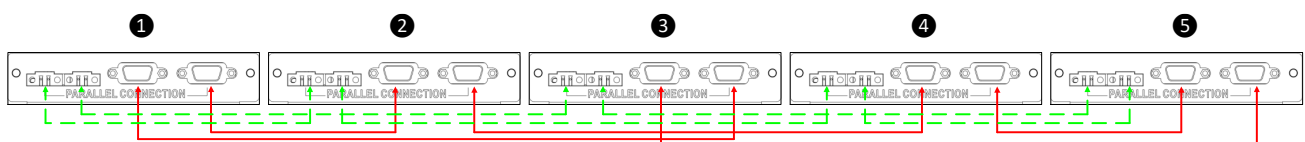


Six UPS in parallel:

Power Connection

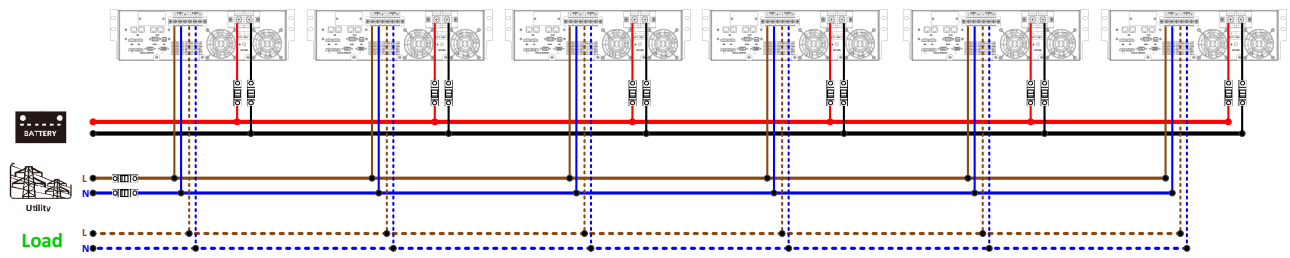






Communication Connection













4. LCD Setting and Display

Setting Program:

Program	Description	Selectable option	
28	AC output mode *This setting is able to set up only when the UPS is in standby mode. Be sure that AC output is off status. Otherwise, please refer to chapter "Power ON/OFF" to press "ESC" button to turn off AC output.	Single(default): 	When the units are used in parallel with single phase, please select "PAL" in program 28. It is required to have at least 3-phase equipment. It's required to have at least one UPS in each phase or it's up to seven UPSs in one phase. Please refers to 5-2 for detailed information. Please select "3P1" in program 14 for the UPS connected to L1 phase, "3P2" in program 14 for the UPS connected to L2 phase and "3P3" in program 14 for the UPS connected to L3 phase. Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.
		Parallel: 	
		L1 phase: 	
		L2 phase: 	
		L3 phase: 	

Fault code display:

Fault Code	Fault Event	Icon on
60	Power feedback protection	
71	Firmware version inconsistent	
72	Current sharing fault	
80	CAN fault	
81	Host loss	
82	Synchronization loss	
83	Battery voltage detected different	
84	AC input voltage and frequency detected different	
85	AC output current unbalance	
86	AC output mode setting is different	

5. Commissioning

Parallel in single phase


Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 28 of each unit. And then shut down all units.


NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.

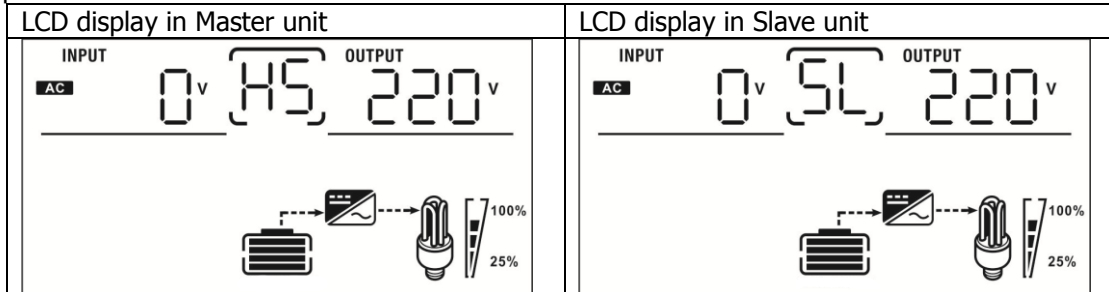

NOTE: Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all UPS connect to utility at the same time. If not, it will display fault 82 in following-order UPS. However, these UPS will automatically restart. If detecting AC connection, they will work normally.

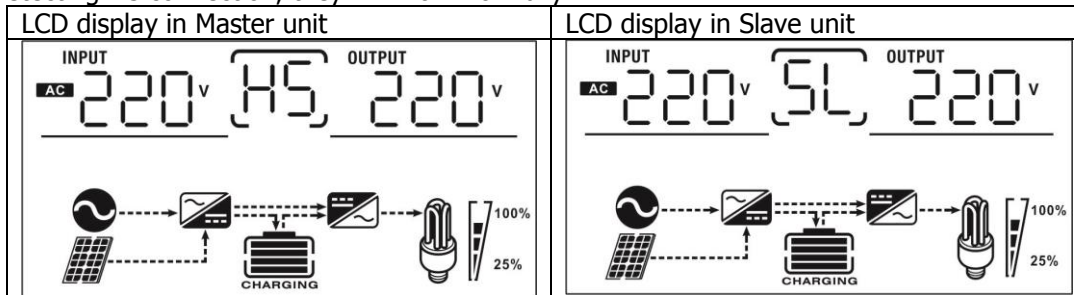

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

6. Trouble shooting

Situation		Solution
Fault Code	Fault Event Description	
60	Current feedback into the UPS is detected.	<ol style="list-style-type: none"> 1. Restart the UPS. 2. Check if L/N cables are not connected reversely in all UPS. 3. For parallel system in single phase, make sure the sharing are connected in all UPS. For supporting three-phase system, make sure the sharing cables are connected in the UPS in the same phase, and disconnected in the UPS in different phases. 4. If the problem remains, please contact your installer.
71	The firmware version of each UPS is not the same.	<ol style="list-style-type: none"> 1. Update all UPS firmware to the same version. 2. Check the version of each UPS via LCD setting and make sure the CPU versions are same. If not, please contact your instraller to provide the firmware to update. 3. After updating, if the problem still remains, please contact your installer.
72	The output current of each UPS is different.	<ol style="list-style-type: none"> 1. Check if sharing cables are connected well and restart the UPS. 2. If the problem remains, please contact your installer.
80	CAN data loss	<ol style="list-style-type: none"> 1. Check if communication cables are connected well and restart the UPS. 2. If the problem remains, please contact your installer.
81	Host data loss	
82	Synchronization data loss	
83	The battery voltage of each UPS is not the same.	<ol style="list-style-type: none"> 1. Make sure all UPS share same groups of batteries together. 2. Remove all loads and disconnect AC input. Then, check battery voltage of all UPS. If the values from all UPS are close, please check if all battery cables are the same length and same material type. Otherwise, please contact your installer to provide SOP to calibrate battery voltage of each UPS. 3. If the problem still remains, please contact your installer.
84	AC input voltage and frequency are detected different.	<ol style="list-style-type: none"> 1. Check the utility wiring connction and restart the UPS. 2. Make sure utility starts up at same time. If there are breakers installed between utility and UPS, please be sure all breakers can be turned on AC input at same time. 3. If the problem remains, please contact your installer.
85	AC output current unbalance	<ol style="list-style-type: none"> 1. Restart the UPS. 2. Remove some excessive loads and re-check load information from LCD of UPS. If the values are different, please check if AC input and output cables are in the same length and material type. 3. If the problem remains, please contact your installer.
86	AC output mode setting is different.	<ol style="list-style-type: none"> 1. Switch off the UPS and check LCD setting #28. 2. For parallel system in single phase, make sure no 3P1, 3P2 or 3P3 is set on #28. For upporting three-phase system, make sure no "PAL" is set on #28. 3. If the problem remains, please contact your installer.

Appendix I: Approximate Back-up Time Table

Model	Load (W)	Backup Time @ 48Vdc 50Ah (min)	Backup Time @ 48Vdc 100Ah (min)	Backup Time @ 48Vdc 150Ah (min)	Backup Time @ 48Vdc 200Ah (min)
N1C.LR3000G	300	432	864	1296	1728
	600	216	432	648	864
	900	144	288	432	576
	1200	112	223	335	446
	1500	89	179	268	357
	1800	74	149	223	298
	2100	64	128	191	255
	2400	56	112	167	223
	2700	50	99	149	198
	3000	45	89	134	179

Model	Load (W)	Backup Time @ 48Vdc 50Ah (min)	Backup Time @ 48Vdc 100Ah (min)	Backup Time @ 48Vdc 150Ah (min)	Backup Time @ 48Vdc 200Ah (min)
N1C.LR6000	500	259	518	778	1037
	1000	134	268	402	536
	1500	89	179	268	357
	2000	67	134	201	268
	2500	54	107	161	214
	3000	45	89	134	179
	3500	38	77	115	153
	4000	33	67	100	134
	4500	30	60	89	119
	5000	27	54	80	107
	5400	25	50	74	99

Note: Backup time depends on the quality of the battery, age of battery and type of battery.